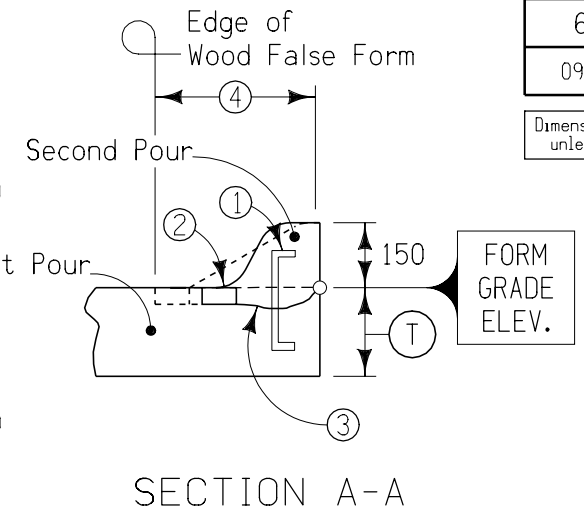
NO. 10
HOOK BAR

SECTION A-A

Notes:

- ① Install hook bar at 300 mm intervals with top projecting so as to clear the paving equipment and as near the false form board as possible to maintain 50 mm surface clearance.
- ② 50 x 100 mm nominal false form.
- ③ Excavate a slight cavity in concrete around each bar.
- ④ 300 mm maximum for Standard 150 mm Curb.
400 mm maximum for Sloped 150 mm Curb.

CONSTRUCTION WHERE CURB IS
OMITTED AT END OF DAY'S RUN