


HMA PATCHES

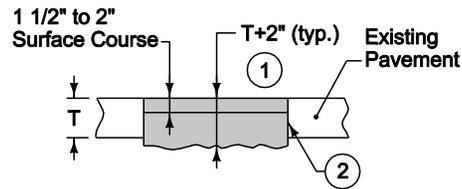

LONGITUDINAL SECTION THRU HMA PATCH

- ① When subgrade or subbase material is required below patch, bring material to bottom of pavement and match existing patch thickness.
- ② When removing pavement, saw to full depth or 10 inches, whichever is less.

	REVISION	
	New	10-19-10
	7040.103	
SHEET 1 of 1		
SUDAS Standard Specifications		
FULL DEPTH HMA PATCHES		