



**PLANTING PIT  
(Bare Root Plants)**

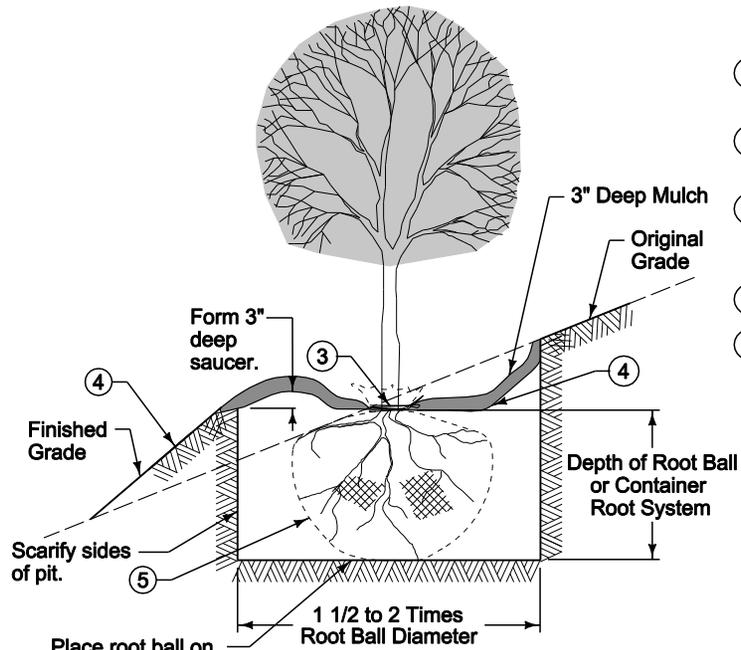

**PLANTING PIT  
(On Slopes)**

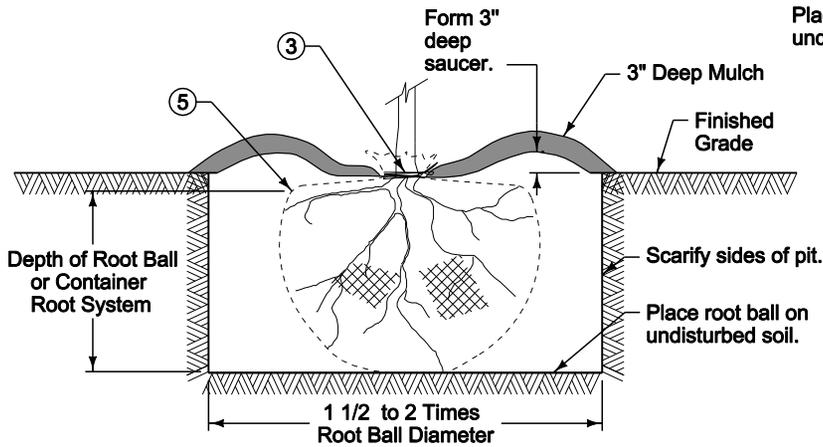

**PLANTING PIT  
(Balled and Burlapped Plants)**

- ① Spread root system in natural position with soil excavated from pit.
- ② Over-excavate 6 inches. Place 6 inches of loose soil in pit prior to planting.
- ③ Install with root collar at or slightly above grade. Do not place mulch within 2 inches of trunk.
- ④ Begin transition at edge of root ball.
- ⑤ Cut and completely remove all twine, burlap, and wire baskets from root ball prior to placing backfill material.

	REVISION
	New 10-18-11
	<b>9030.101</b>
SHEET 1 of 1	