



Step 3

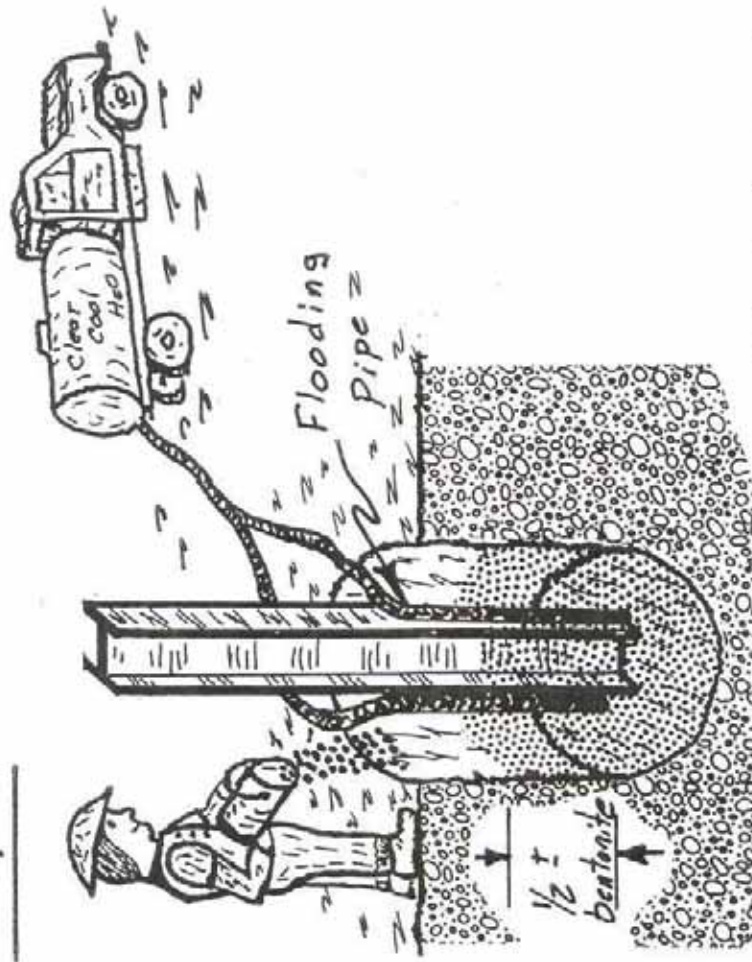


Flood bentonite  
with water. Wait  
about 20 min. Move  
Pipes up & repeat.

Step 2

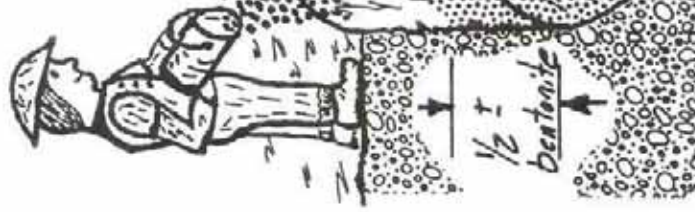


Fill hole about  
 $\frac{1}{2}$  full of  
bentonite chips

Step 1

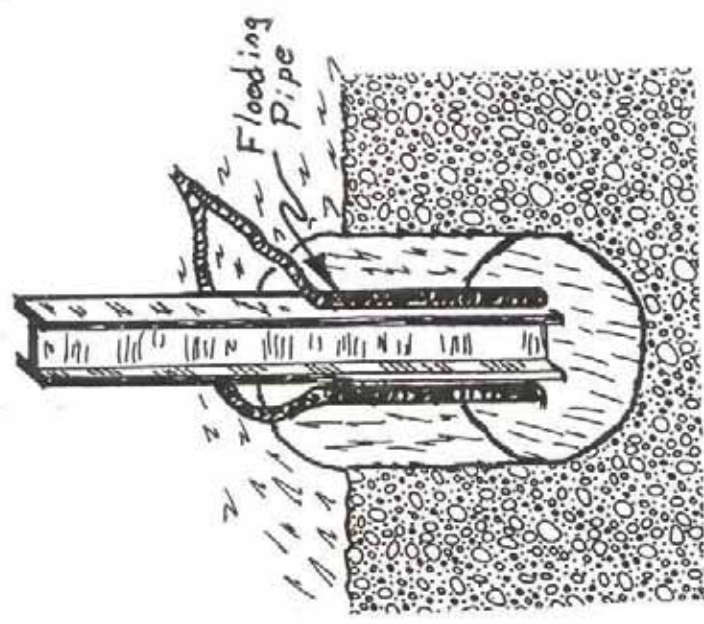


Insert down-hole  
Flooding Pipes

Step 1

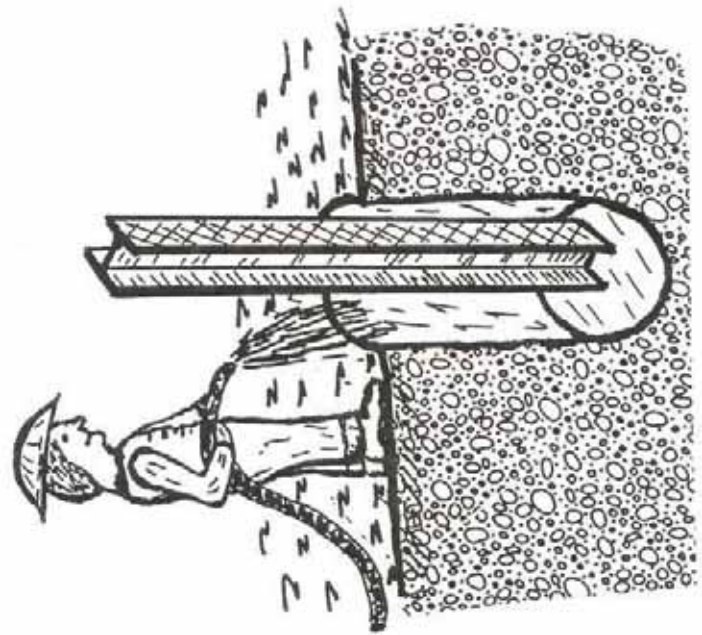

Fill hole  
about  $\frac{1}{2}$  full  
of water

Step 2

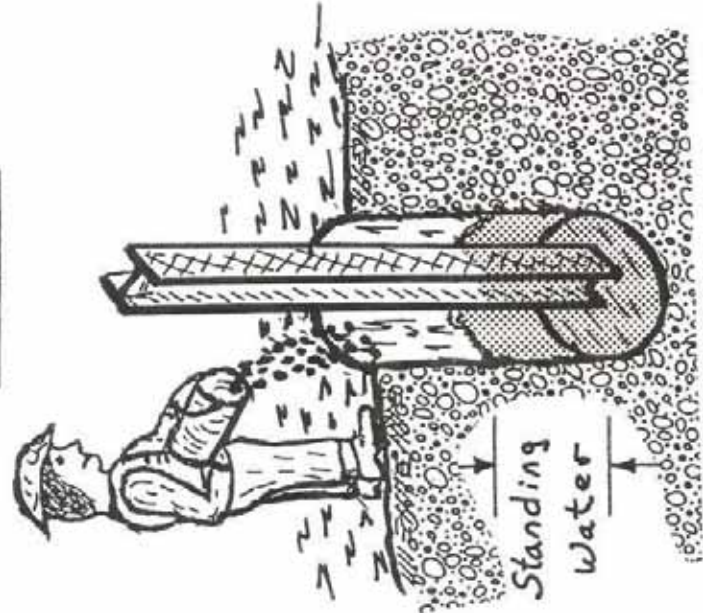

Fill hole about  
 $\frac{1}{2}$  full of bentonite.  
Allow about 20 min.  
before continuing.