



- ① Vertical saw cut (typical). Apply tack coat to sides and bottom.
- ② Vertical saw cut (typical). Apply cement grout to sides and bottom.
- ③ Saw and seal existing joint.
- ④ Extend patch limits at least 3 inches beyond distressed area.
- ⑤ When milled removal is allowed, sawed vertical edges are not required. Apply cement grout to milled area.

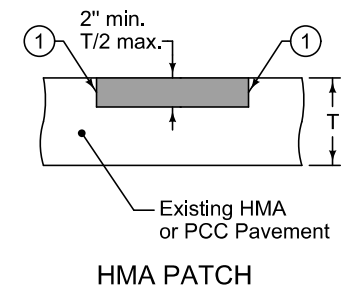

	<small>REVISION</small> New   10-19-10
	SUDAS <b>7040.104</b>
	SHEET 1 of 1
SUDAS Standard Specifications	
PARTIAL DEPTH PATCHES	