
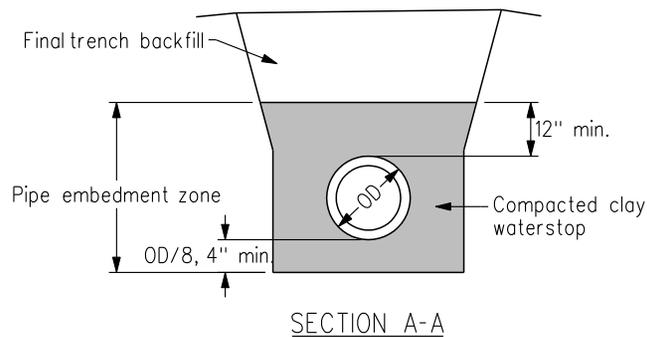


Install waterstops when specified in the contract documents.

When waterstops are required, install at a nominal spacing of 800 feet or at locations as specified.

Place clay backfill material from the trench bottom to 12 inches over the pipe. Compact to a minimum of 95% Standard Proctor Density. If trench stabilization material is required, extend waterstop through stabilization material to bottom of trench.

Comply with Section 3010 for placement of final backfill material above waterstop.

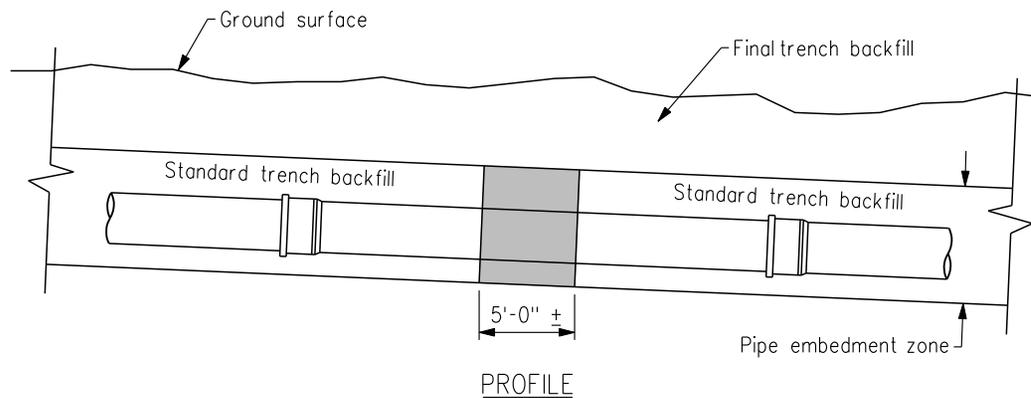

 <b>SUDAS</b>	REVISION	
	NEW	10/21/08
	<b>FIGURE 3010.904</b>	
SHEET 1 OF 1		