



CONCRETE COLLAR

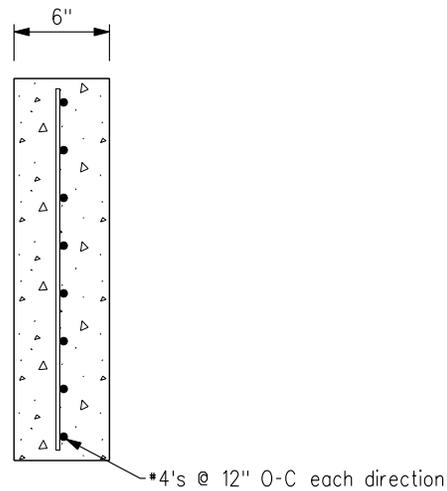

SECTION A-A

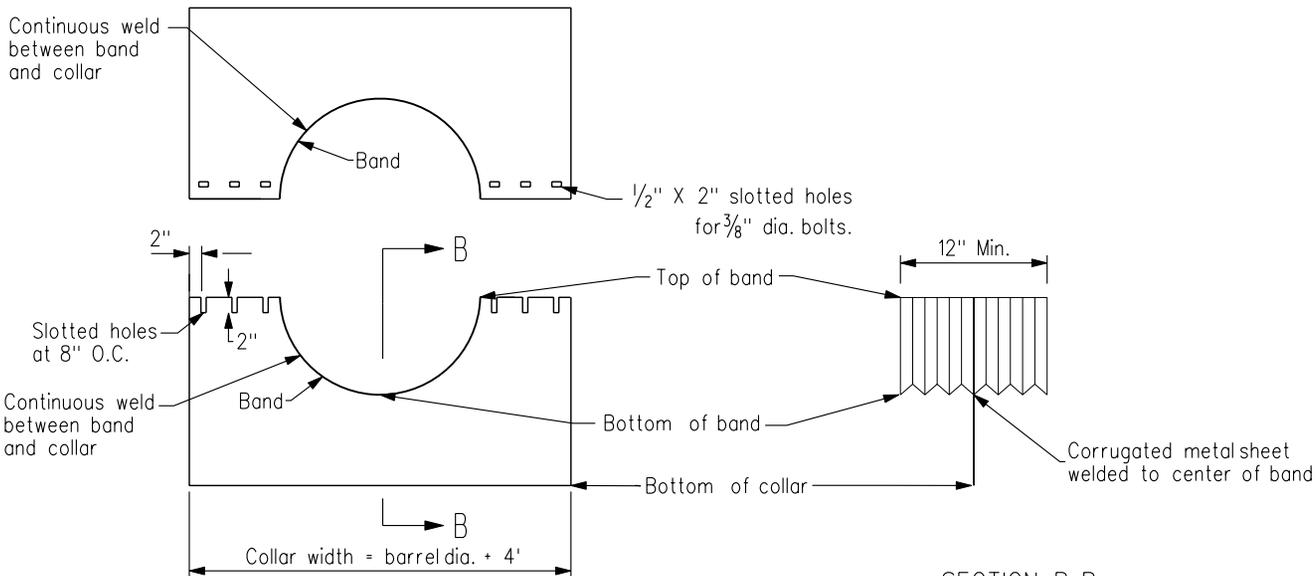

CMP COLLAR

GENERAL NOTES:

Anti-seep collars are not required unless specified in the contract documents.

Place backfill and compact overexcavated areas to a minimum of 95% standard Proctor density.

Concrete Collar:

1. Place collars a minimum of 2 ft. from pipe joints.
2. Provide a 4,000 psi (min.) concrete mix per Section 6010.

CMP Collar:

1. Provide collar of same gage as the pipe barrel on which it is used.
2. Paint or tag unassembled collars to identify matching pairs.
3. Furnish each collar with two 1/2 in. dia. rods with tank lugs for connecting collars to pipe.
4. Install collar with corrugations vertical.
5. Seal the lap between the two half-sections and between the pipe and connecting band with a bituminous jointing compound at the time of installation.

FIGURE: 9040.I7 SHEET 1 OF 1

	REVISION NO. ---
	REVISION DATE 10/17/06
FIGURE: 9040.I7	SHEET 1 OF 1
ANTI-SEEP COLLAR	