



1. Place slope drain on undisturbed soil or well-compacted fill.
2. Carefully compact cohesive soils around inlet end of the drain in 6 in. lifts.
3. Discharge slope drain to a stable outlet or to a sediment retention device.
4. Provide pipe and aprons of diameter specified.

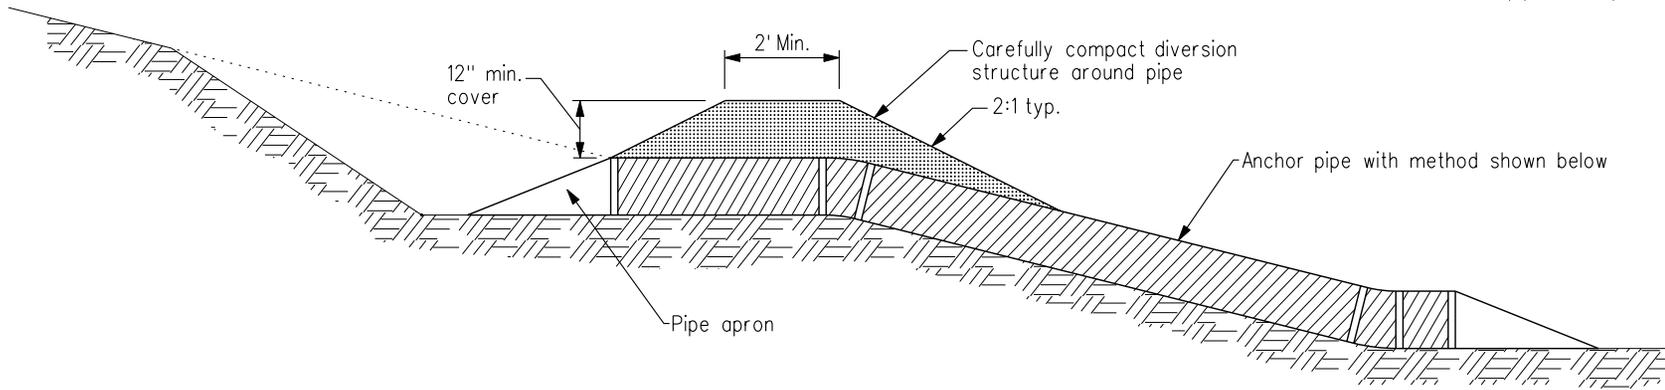


Place and compact fill along sides of pipe

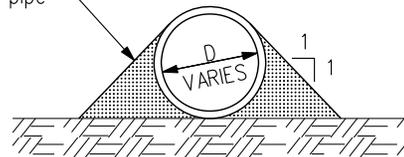


OPTION A

Install steel fence post on both sides of pipe at 10' max. spacing

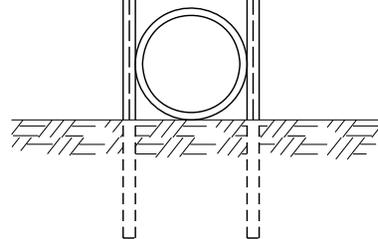

OPTION B

Bury pipe to springline

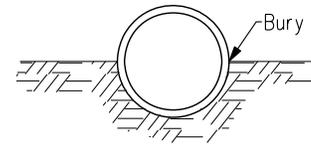

OPTION C

(May also be combined with options A or B)

**SLOPE DRAIN ANCHORING OPTIONS**

(Options A, B, & C are interchangeable unless specified)

	REVISION NO. ---
	REVISION DATE 10/17/06
FIGURE: 9040.I2	SHEET 1 OF 1

**TEMPORARY PIPE SLOPE DRAIN**