


- ① Vertical saw cut (typical). Apply tack coat to sides and bottom.
- ② Taper the sides of the removal area 30 to 60 degrees from vertical. Apply cement grout to sides and bottom.
- ③ Saw and seal existing joint.
- ④ Extend patch limits at least 3 inches beyond distressed area.
- ⑤ When milled removal is allowed, sawed vertical edges are not required. Apply cement grout to milled area.

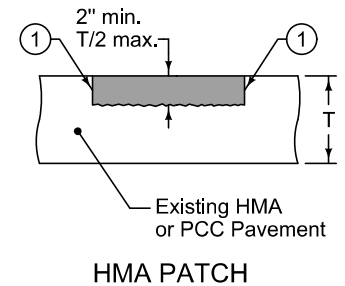

	REVISION 1 10-17-17
	SUDAS 7040.104 SHEET 1 of 1
SUDAS Standard Specifications	
PARTIAL DEPTH PATCHES	