



HMA PATCHES

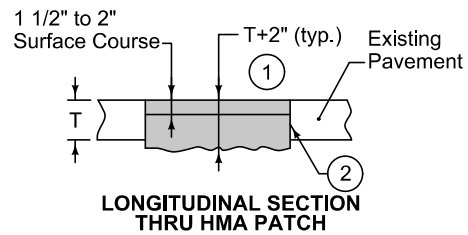

- ① If subgrade or subbase material is required below patch, bring material to a level 2 inches below bottom of existing pavement.
- ② When removing pavement, saw to full depth or 10 inches, whichever is less.

	REVISION	
	2	10-17-17
	SUDAS 7040.103	
SHEET 1 of 1		
SUDAS Standard Specifications		
FULL DEPTH HMA PATCHES		