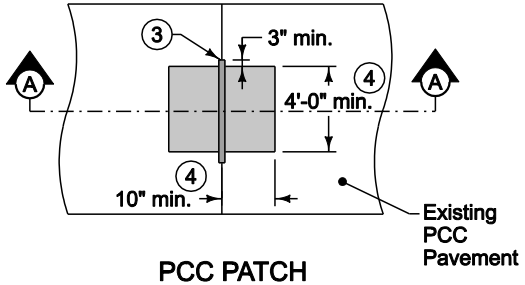

PCC PATCH
ACROSS JOINT

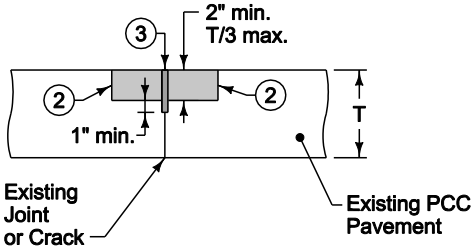

SECTION A-A
(Option 1: Sawed Edges)

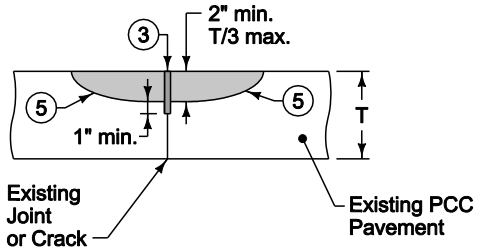

SECTION A-A
(Option 2: Milled Edges)

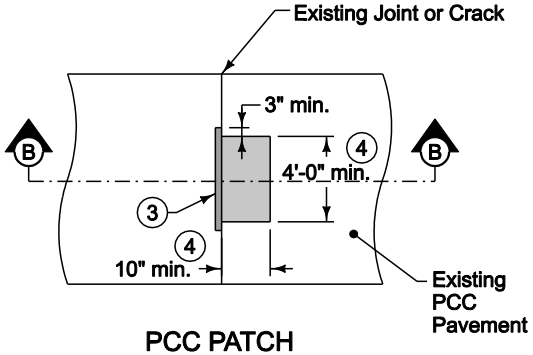

PCC PATCH
ABUTTING JOINT

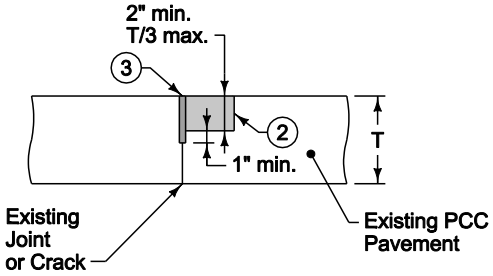

SECTION B-B

1. Vertical saw cut (typical). Apply tack coat to sides and bottom.
2. Vertical saw cut (typical). Apply cement grout to sides and bottom.
3. Saw and seal existing joint.
4. Extend patch limits at least 3 inches beyond distressed area.
5. When milled removal is allowed, sawed vertical edges are not required. Apply cement grout to milled area.

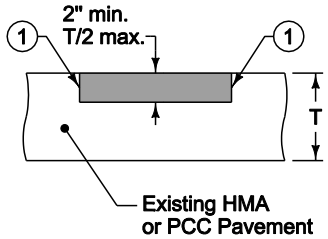

HMA PATCH

	REVISION	
SUDAS	New	10-19-10
	7040.104	
	SHEET 1 of 1	

SUDAS Standard Specifications

PARTIAL DEPTH PATCHES

FIGURE 7040.104 | SHEET 1 OF 1