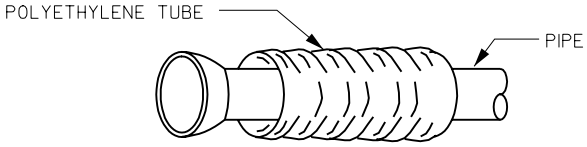

STEP 1

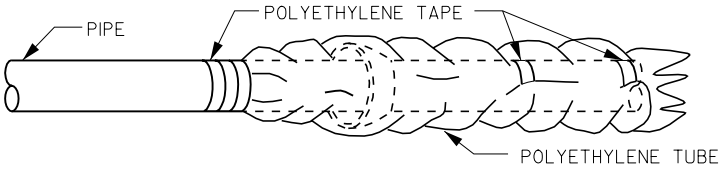

STEP 2

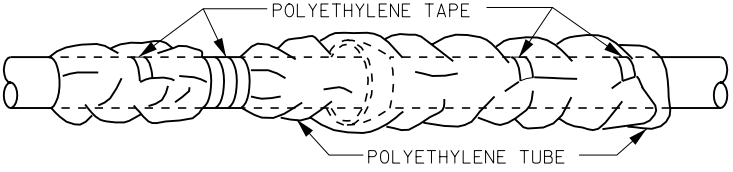

STEP 3

FIELD INSTALLATION - POLYETHYLENE WRAP

STEP 1- PLACE TUBE OF POLYETHYLENE MATERIAL ON PIPE PRIOR TO LOWERING IT INTO THE TRENCH.

STEP 2 - PULL THE TUBE OVER THE LENGTH OF PIPE. TAPE TUBE TO PIPE AT JOINT. FOLD MATERIAL AROUND THE ADJACENT SPIGOT END AND WRAP WITH TAPE TO HOLD THE PLASTIC TUBE IN PLACE.

STEP 3 - OVERLAP FIRST TUBE WITH ADJACENT TUBE AND SECURE WITH PLASTIC ADHESIVE TAPE. THE POLYETHYLENE TUBE COVERING THE PIPE SHALL BE LOOSE. EXCESS MATERIAL SHALL BE NEATLY DRAWN UP AROUND THE PIPE BARREL, FOLDED ON TOP OF AND TAPED IN PLACE.

NOTES: IRON PIPE FITTINGS, INCLUDING VALVES, VALVE BOXES, AND HYDRANTS SHALL BE WRAPPED WITH POLYETHYLENE MATERIAL. THE WRAPPING SHALL EXTEND AT LEAST 1' BEYOND THE FITTING JOINTS ONTO THE ADJOINING PIPE AND SHALL BE FASTENED TO THE PIPE WITH PLASTIC TAPE. TAPE SHALL BE USED AS NEEDED TO HOLD WRAP IN PLACE. EITHER POLYETHYLENE SHEETS OR SLIT TUBING MAY BE USED.

1	01/25/01			
REV.	DATE	BY	POLYETHYLENE WRAP	FIGURE: 5010.4
DATE: 01-01-98				SHEET 1 OF 1